

SECTION 1 - GENERAL REGULATIONS *continued*

1.18 TERMINAL EQUIPMENT *continued*

1.18.3 *continued*

- E. The total weighted rms voltage within the band from 50 Hertz to 300 Hertz shall not exceed 100 volts. The total weighted rms voltage is the square root of the sum of the products times the square of the rms voltage of the individual frequency components. The weighting factors are as follows:

-	<u>For frequencies between</u>	<u>Weighting factor</u>	
	500 Hertz and 100 Hertz	2	4
		f/10	
	100 Hertz and 300 Hertz	3.3	6.6
		f/10	

- 1.18.4 The customer shall also comply with the minimum protective criteria generally accepted in the telephone industry and other appropriate criteria as may be prescribed by Company. The customer shall ensure that his or her terminal equipment is properly interfaced with the Company's facilities and are of the proper mode, band width, power, data speed, and signal level for the intended use of the customer, and that the signals do not damage the Company's equipment, injure personnel or degrade service to other customers.
- 1.18.5 If the customer fails to maintain and operate his or her terminal equipment properly, resulting in the occurrence or possibility of harm to Company's equipment, personnel, or the quality of service to other customers, Company may, upon written notice, require the use of protective equipment at the customer's expense. If this fails to produce satisfactory quality and safety of service, Company may, upon written notice, terminate the customer's service.

1.19 LOCAL CHARGES

In certain instances, customer may be subject to local telephone company charges or message unit charges to access the Company's terminal. Company is not responsible for any such local or message unit charges incurred by customer in gaining access to Company's terminal.